








PLVTii

Storage Ottoman Bench

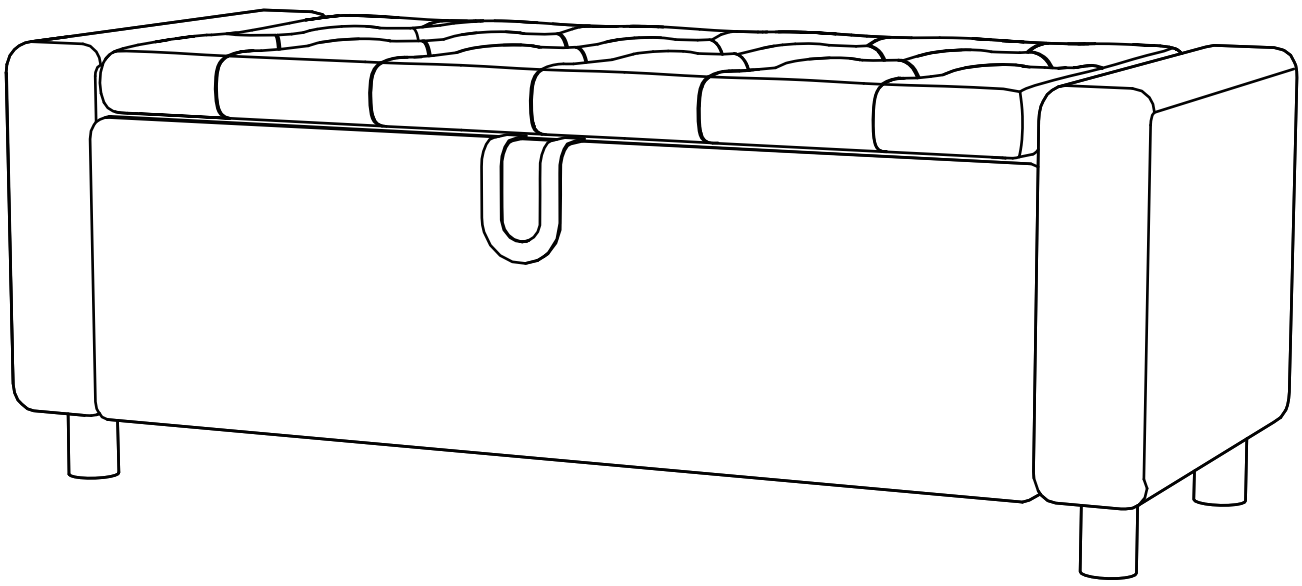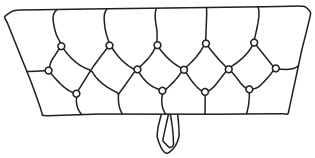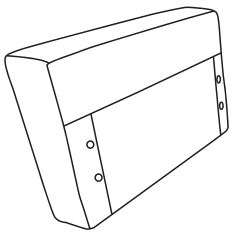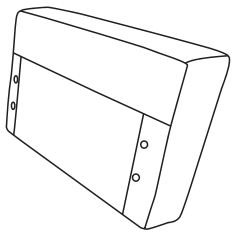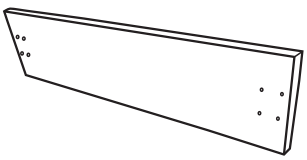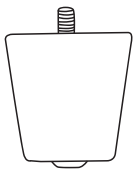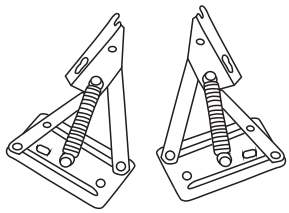


Installation Method & Accessory Diagram

A  1 PC	B  1 PC	C  1 PC
D  2 PCS	E  1 PC	F  4 PCS
G  4 PCS	H  4 PCS	I  2 PCS
J  M6x20mm 10 PCS	K  M6x30mm 16 PCS	L  1 PC

Installation Steps


STEP 1

Install the L-shaped bracket onto the back panel.

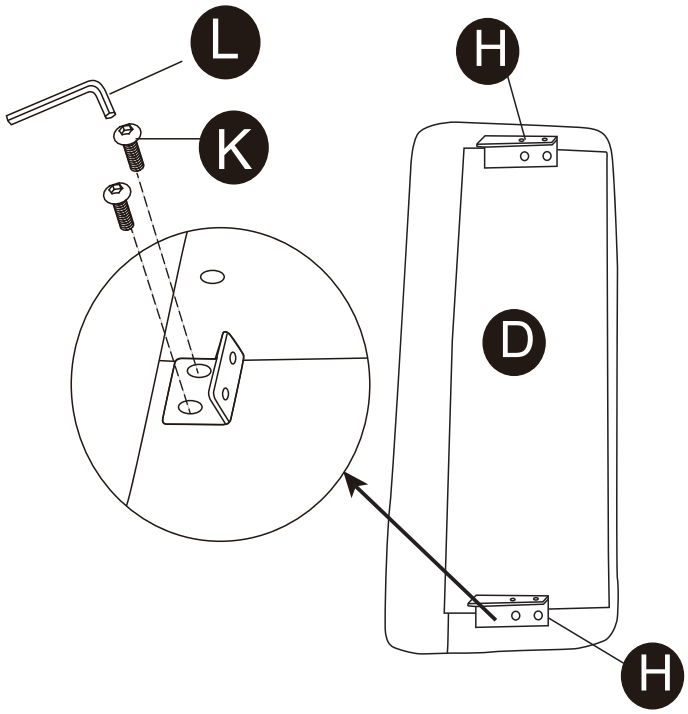


STEP 2

Connect the back panel to the left and right side panels.

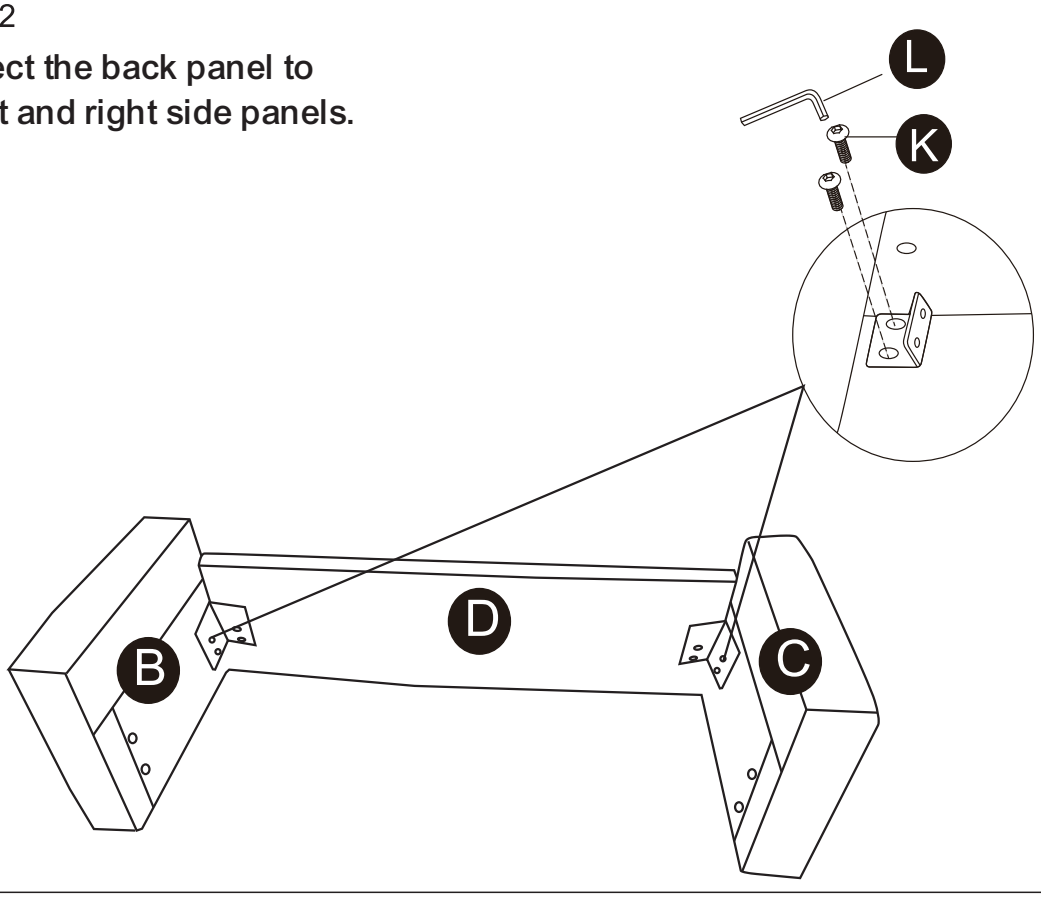


STEP 3

Connect the front baffle to the left and right side panels.

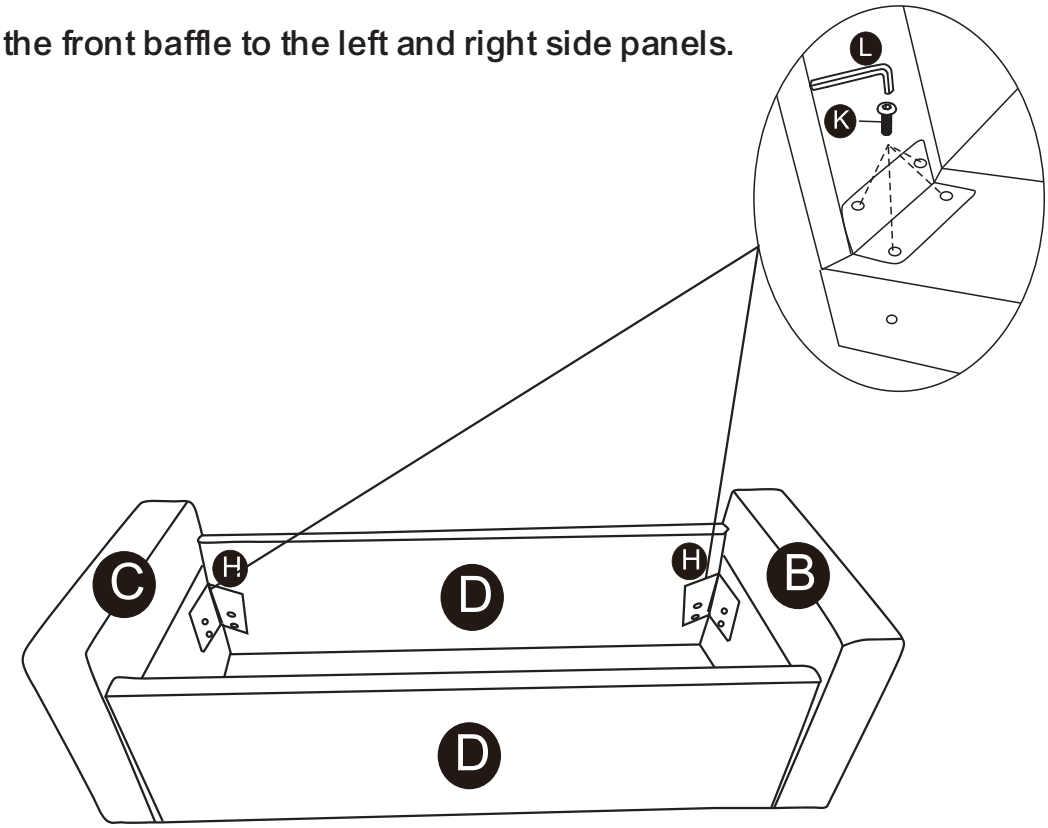

STEP 4


Install 4 plastic feet.

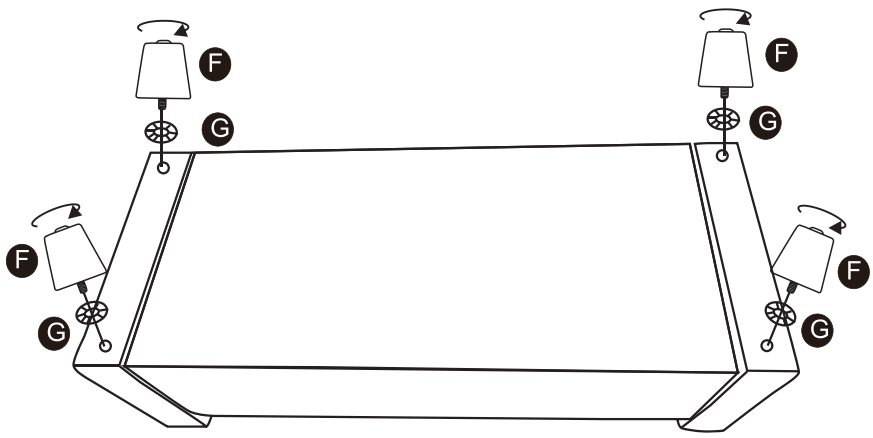




STEP 5

Place the bottom panel in position.

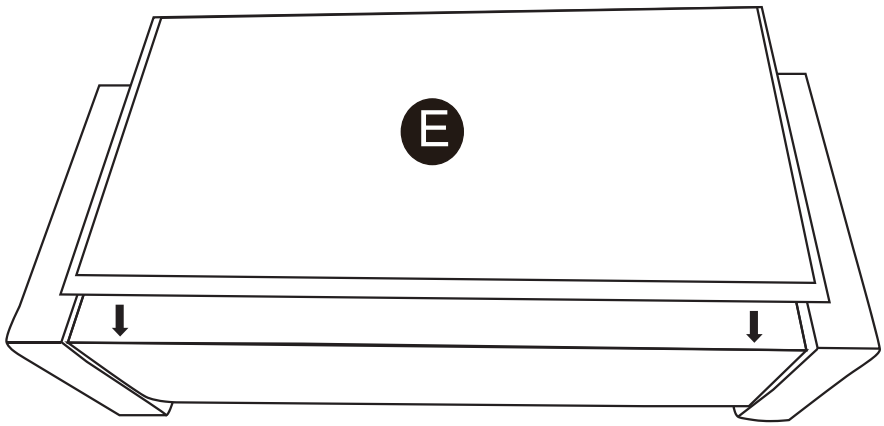


STEP 6

Fit hinges to the side panels.

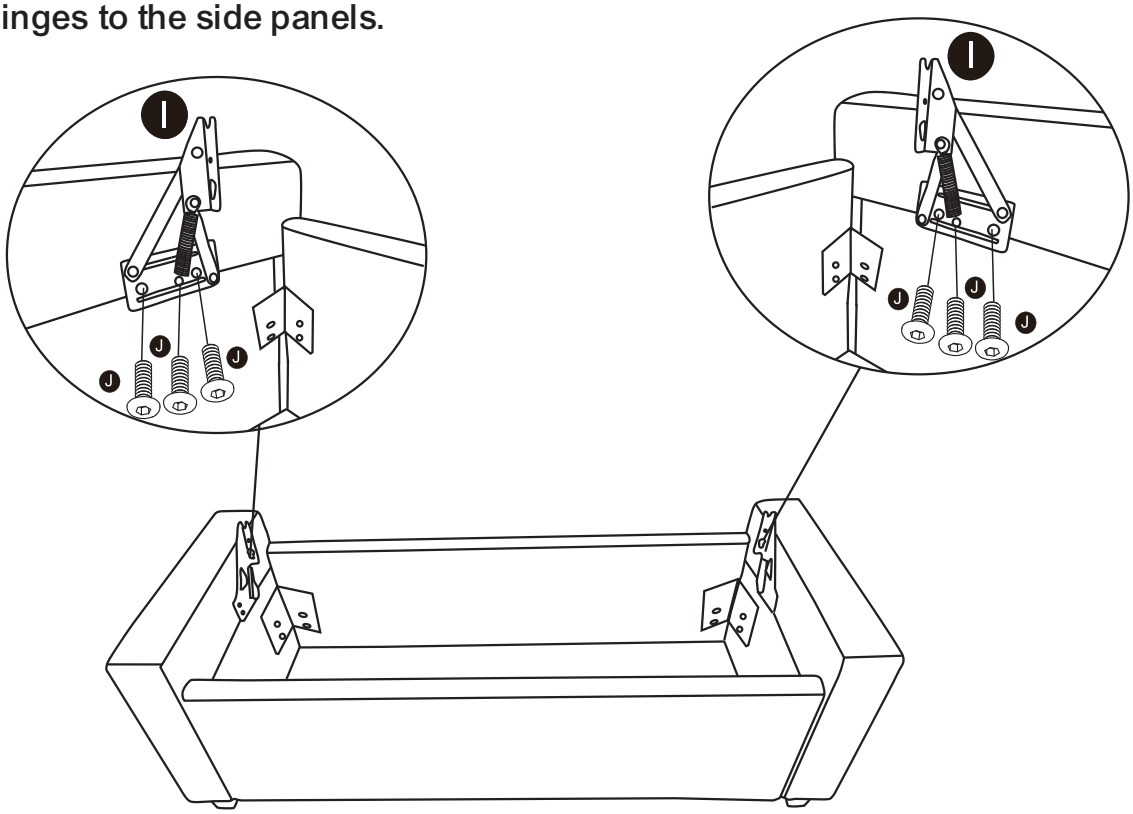

STEP 7

Hinge and fasten the cover panel in place.

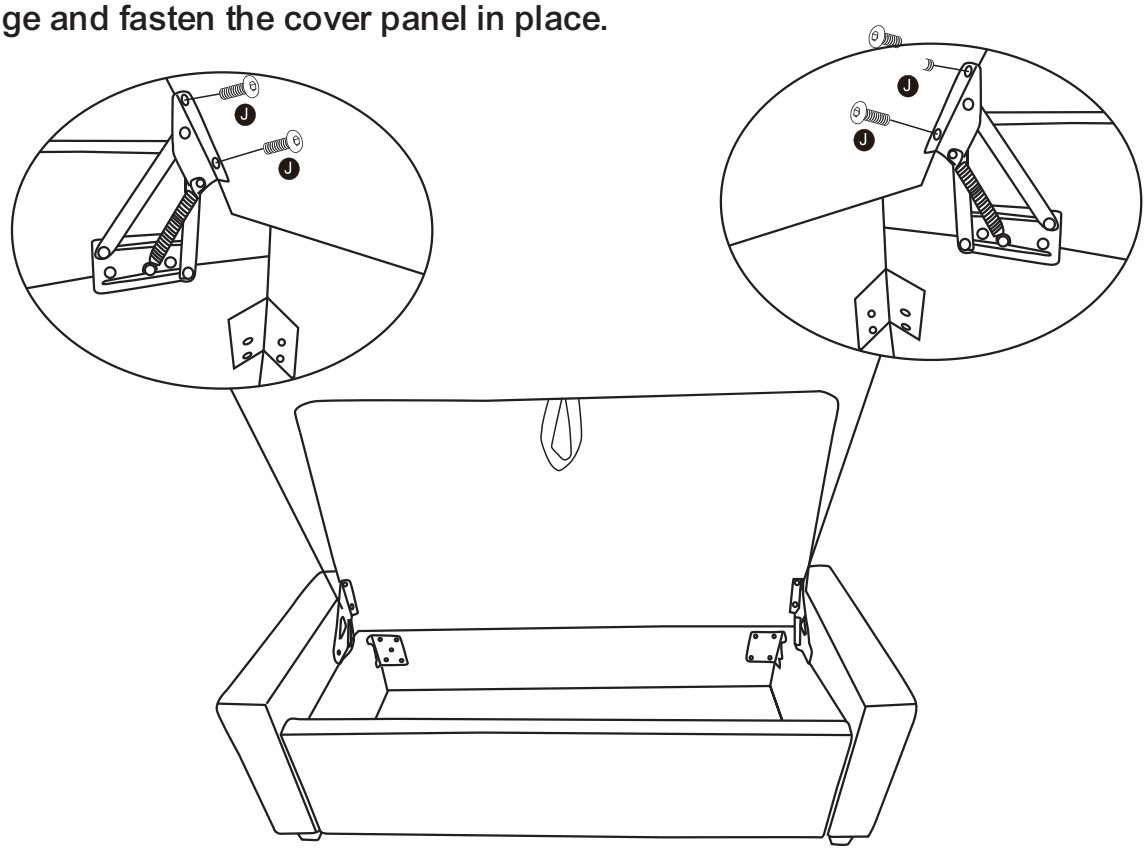

STEP 8

Assembly completed.

